

ELECTRICAL CONNECTION

Premier 2, 4 and 6-slot toasters operate from a standard electrical supply socket and are fitted with the appropriate plug. **An 8-slot toaster requires a 20 amp service, whilst 10 and 12-slot toasters require a 30 amp service. They Must be connected to a double pole isolated switch, with a minimum of 3mm clearance per pole.**

CARE & MAINTENANCE

Wipe down with a damp cloth and proprietary multi-surface cleaner to remove any grease. Never use a scouring agent as this will scratch the finish. Always empty your crumb tray at frequent intervals as this aids toasting performance and reduces the risk of smell, smoke and burning. On the Brunch model after each use ensure any split filling is removed from carrier and crumb tray.

Bread containing fruit or nuts can be toasted but natural sugars present may cause them to stick to the guard rails on your toaster. Such debris should not be left on the guard rails as it will char and possibly smoke and can swell so as to damage the element.

Once the timer has started an element gives out heat from both sides, so the first "unpowered" slot will always give out heat on one side. On the Brunch and Thick 'n' Thin toasters once you turn the timer on, the middle slot always has one element working, even if both selector switches are "off".

SERVICING & REPAIRS

Elements wear out with use and it is impossible to predict their life as this is affected by the amount and type of use and the quality of electrical supply. They can easily be damaged by careless handling. Your toaster has been designed that should anything go wrong all major components such as elements and switches can easily be replaced. Repairs or replacement of components should be undertaken only by a competent electrician. All components and fitting instructions can be obtained either from your supplier or directly from the manufacturer.

*Rowlett, Rutland Ltd
32 Bookham Industrial Park, Church Road,
Bookham, Surrey, UK. KT23 3EU*

*Tel: +44 (0)1372 453633 / 450855 Fax: +44 (0)1372 453536 / 453671
Issue 3 for 220-240V a.c. Aug 2003*

PREMIER TOASTER INSTRUCTION BOOK

(all models)

Please ensure that all packaging materials have been removed before you use your toaster.

SAFETY – PLEASE READ!

The temperature of accessible surfaces may be high when the appliance is operating.

Bread may burn. Therefore toasters must not be used near or below curtains and other combustible materials. They must be watched.

Do not leave toasters plugged into a live socket when not in use. *Always switch off at the plug.*

Always allow a toaster to cool before putting away - allow 15 minutes. *Never move a toaster whilst in use.*

Before doing any maintenance ensure that the toaster is unplugged from the electrical supply.


Never use a knife or other sharp instrument to clear jammed slots or burnt crumbs (not only can this be dangerous but it can damage the elements).

If the supply cord is damaged on models: 4ATS, 4TTS, 6ATS it must be replaced with type: CORDSET-131. On 8ATS models it must be replaced with type: CABLE-102 from the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

NEVER IMMERSE A TOASTER IN WATER

Ensure your toaster is plugged in before turning it on. There is no separate on/off switch on the toaster as it forms part of the timer mechanism. Your toaster is "off" when the number "0" is on the top of the dial. All Rowlett Rutland Ltd toasters have a switch that enables you to control which slots are in use, saving on element wear and electricity. Choose how many slots you need and adjust the control switch accordingly.

Load bread into toaster with ejector lever (E) up. Lower to toast. Do not use bread that is too thick. Set the timer switch (C) between settings 1 and 2 according to your taste. It is better to use 1 day old bread. The neon indicator (B) will light and the timer will start. Power will be automatically turned off shortly before the timer completes its task. The toast can be removed immediately by using the ejector lever, or left in the machine to keep warm for several minutes.

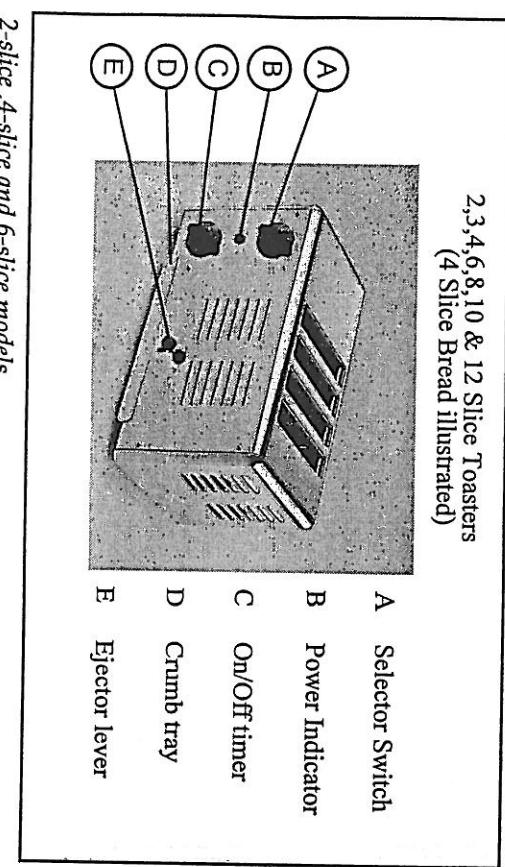


2-slice, 4-slice and 6-slice models

On 2-slice models the switch (A) in position "1" energises the left hand slot only; position "2" energises both slots. On 4-slice models the switch (A) in position "1" energises slot 1 on the left; in position "2" energises slot 2; in position "3" energises slot 3; in position "4" energises slot 4. On the six-slice model the switch (A) in position "2" energises slots 1/2; in position "3" energises slots 1/2/3; in position "4" energises slots 1/2/3/4; in position "6" energises all slots.

Slot selection is made by a rotary switch (A) which permits sequential powering of each pair of slots from the LH side (2/4/6/8/10/12).

Thick 'n' Thin models

On the Thick 'n' Thin model the selector switch (A) energises the Slots required, i.e. 1,2 energises the two thin slots (on the left-hand side), 1TH, 2TH energises the two thick slots (on the right-hand side), 4 energises all four slots, 1B energises one element between the two thick slots (for Buns). The two thick slots on the right should be used for toasting buns, teacakes or thicker slices of bread.

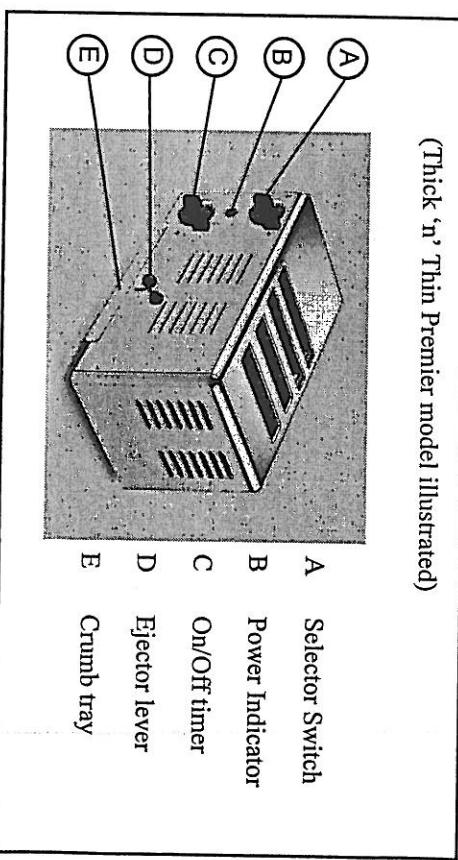

Brunch models

On Brunch models the left hand switch (A) energises the 2 bread slots (those on the left) whilst the right hand switch (A) energises the sandwich slot. Turning both switches on powers all three slots. When making toasted sandwiches, using the Brunch toaster's special compartment, use a timer setting of between 4 and 5. Sandwiches should be made in the normal way (i.e. buttered on the inside). A wide variety of fillings can be used but all ingredients should be chopped or shredded to assist the cooking process. Hard cheese should always be grated. Meat, fish, eggs etc should always be pre-cooked. Suitable toasting bags are very useful if using a runny or thick filling (the sandwich should be placed wrapped inside the carrier but allow a vent for steam - slightly reduce cooking time).

For the Brunch model sandwich slot you **must** use the carrier provided even if only using it to toast one slice of bread. **Do not use the carrier in the bread slots, it must only be used in the special sandwich slot.**

Slot selection is made by a rotary switch (A) which permits sequential powering of each pair of slots from the LH side (2/4/6/8/10/12).