


# INSTRUCTIONS FOR THE INSTALLATION, USE AND MAINTENANCE OF THE

## UVA 16W STERILIZER

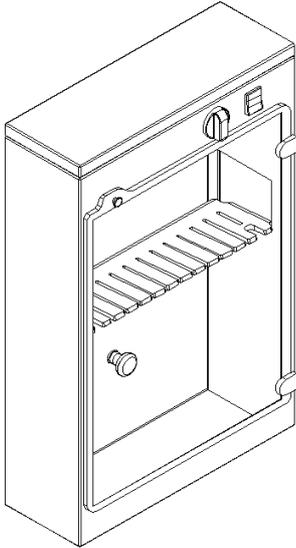

Take the sterilizer out of the package.

Before connecting the machine to the electrical outlet make sure that the tension is the same as the one on the serial number-technical plate placed on the side of the machine.

**N.B.:** connect the machine on the ground in accordance with the norms in force.

### ATTENTION

**The short ultraviolet radiations (emission spectrum 253.7 nm) emitted by the lamps are extremely damaging to all living organisms; avoid exposing eyes to the direct radiation.**

### TURNING ON AND TURNING OFF

To turn on the machine push the lit switch into the “ON” position and turn the timer clockwise until reaching the desired time. At the end of the set time the lamp will automatically turn off. To turn off the machine simply push the lit switch into the “OFF” position.

### USE

Before starting to use the machine clean it with a neutral detergent and a damp cloth, then rinse and dry it.

The sterilizer must be used only on previously washed utensils. The knives must be inserted in the extractable plexiglass knifeholder shelf, and they must be exposed at least 1hr and 30' to obtain the bactericide effect. It is not necessary to turn them in that both sides are exposed to U.V.A. rays.

### DESCRIPTION

- The U.V.A. electric sterilizer, which can be fastened on a wall, is made entirely in AISI 430 stainless steel;
- the door which perfectly closes the chamber and keeps the ultraviolet rays is made of smoked plexiglass;
- the knifeholder is made of transparent plexiglass and can be extracted for better cleaning and enables sterilizing up to 15 knives without having to turn them;
- the 16W mercury vapour lamp is controlled by a timer 0÷120 min. and is located in the upper part of the sterilizer, protected by a metallic net;
- the sterilizer is equipped with a safety microswitch that turns off the lamp when the door is opened.

### TECHNICAL DATA TABLE:


MODEL	INPUT	N°LAMPS AND POWER	TIMER	CAPACITY N°KNIVES	DIMENSIONS mm	ASSORPTIONS
16WSTERILIZER	230 V / 50 Hz	N°1 16 W LAMP	0÷120 min.	≅15 KNIVES	400 x 140 x 620	POWER≅ 70W ELECTRICITY ≅ 0.3A

### ELECTRIC CIRCUIT DIAGRAM

#### CLEANING

Before cleaning the machine make sure it has been unplugged.

Clean the machine only with water and neutral detergents, never use abrasive products, water jets and vapour, easily inflammable detergents, utensils, brushes and anything else that could damage the machine.

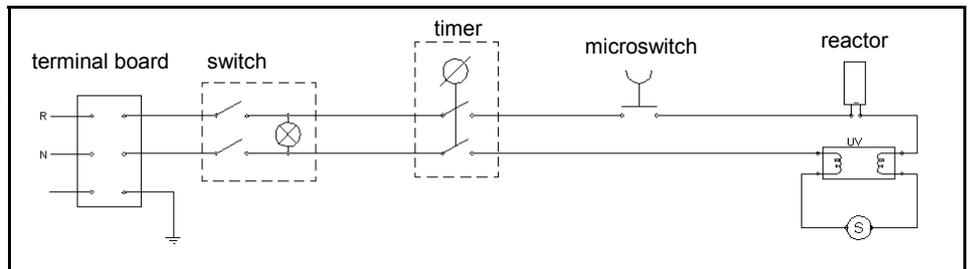

### TECHNICAL ASSISTANCE

Make sure that the technical assistance is carried out only by trained personnel.

To order spare parts or for any other information relative to the machine contact the assistance centre and always state the serial number and the model of the machine shown on the technical plate placed on its side.